



# **Delta - Supporting and Servicing HP 3PAR StoreServ Solutions**


Version: 6.0

[ Total Questions: 30 ]



**Question No:1** 

Refer to the exhibit.

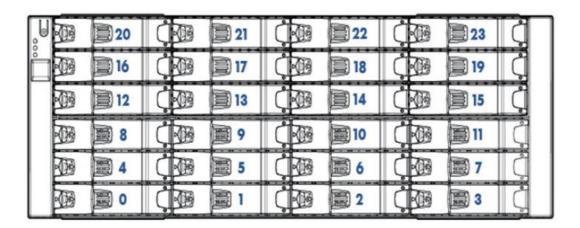

You are installing an HP 3PAR StoreServ 7200 with an additional M6720 drive enclosure. Where should you install four LFF NL disks and four LFF SSDs in the new enclosure for a supported configuration'?

- A. SSD drives in Slot 0, 4, 8, and 12; NL drives in Slot 16, 20, 1, and 5
- **B.** SSD drives in Slot 0, 4, 8, and 12; NL drives in Slot 3, 7, 11, and 15
- C. NL drives in Slot 0, 1, 2, and 3; SSD drives in Slot 4, 5, 6, and 7
- **D.** NL drives in Slot 0, 3, 20, and 23; SSD drives in Slot 4, 16, 7, and 19

### **Answer: B**

## **Explanation:**

LFF drives must be loaded in pairs of identical drives starting at the bottom of a column, leaving no empty slots between drives in the column. Columns of drives in the M6720 enclosure must be of the same type (SSD or NL) and, for HDDs, the same rotational speed. Drives of differenttypes may not be mixed in a single column. It is permitted to have empty columns between columns containing drives. Different columns do not have to contain the same number of drives

### **Question No: 2**

A customer has tested an HP 3PAR StoreServ 7000 in a try-and-buy scenario and now wants to buy the system. During the initial setup, the customer decides against a connection to HP 3PAR Central. The customer wants you to enable the connection in



Secure Network Mode (SNM).

Which port should you enable on the customer's firewall?

- **A.** 20 (FTP)
- **B.** 161 (SNMP)
- **C.** 389 (LDAP)
- **D.** 443 (HTTPS)

**Answer: B** 

## **Question No: 3**

What is the procedure change when you use HP 3PAR SmartStart during an HP 3PAR StoreServ 7000 installation?

- **A.** A default password is no longer generated for the 3paradm account.
- **B.** The serial ports on the system are disabled.
- **C.** All hosts accessing LUNs on the system must be configured using HP 3PAR SmartStart.
- D. The Virtual Service Processor must be used

**Answer: C** 

## **Question No: 4**

Your customer has a two-node HP 3PAR StoreServ 7400 with two additional drive shelves. They have just purchased an additional 16 SFF drives. What must the customer do when adding the drives to the enclosures'?

- **A.** Perform an autonomic rebalance after adding the drives,
- **B.** Run System Tuner on the CPGs using the new drives.
- C. Add a minimum of two drives to each enclosure
- **D.** Attach the same number and type of drives to each node pair.

**Answer: D**